www.philips.com/welcome

RWSS5512



用户手册		
Benutzerhandbuch		
Mode d'emploi Manual do Usuário		



Contents

 
1	Notice				
	Compliance Important	2			
2	Connect Place the wireless receiver Connect the wireless transmitter Connect rear speakers to wireless receiver Connect power cord	3 3 3 4 4			
3	Troubleshooting	4			
4	Product specifications	5			

1 Notice

Compliance

(6

This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).



* Wireless and Ethernet LAN functions are authorized for indoor use only.

Hereby, Philips Consumer Lifestyle, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.



Note

• This equipment has been tested and found to comply with the limits for a Class B,C digital device, pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the product!

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

2 Connect

Place the wireless receiver

Place the wireless receiver near the AC outlet and in between the rear speakers. Align the wireless receiver with the home theater, with Philips logo facing the home theater.

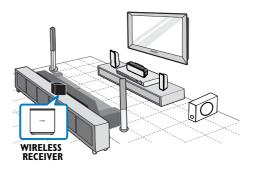




Vote

 For best reception, make sure that the line-ofsite between the wireless receiver and the home theater is not blocked by furniture, walls and other objects.

 Connect the wireless transmitter




Connect the wireless transmitter to the **Wireless Rear Audio** connector on the back of the home theater.

Connect rear speakers to wireless receiver



The rear speakers in the picture showed may vary.

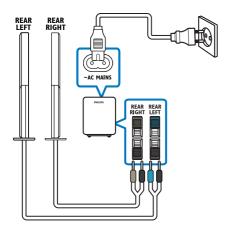

Connect the rear left and rear right speakers to the matching connectors at the back of the wireless receiver.

Connect power cord



Warning

· Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.

Connect the power cords for home theater, wireless receiver and other devices after you have made all of the other connections.

→ The wireless indicator lights and the wireless receiver is ready to use.

3 **Troubleshooting**

Follow these steps if:

- there is no sound from the rear speakers, and
- the indicator on the wireless receiver blinks continuously for more than one minute.

For Blu-ray home theater

- Connect the home theater, wireless transmitter, and wireless receiver correctly (see 'Connect' on page 3).
- Insert a pin into the pairing pinhole at the back of the wireless receiver.
 - → The indicator on the wireless receiver blinks for thirty seconds. Complete the remaining steps within thirty seconds.
- Switch the home theater to either AUX source or MUSIC iLINK source.
- Press and hold the Navigation button ▶ (right) until PAIRING (PAIRING) blinks on the home theater display panel.
 - 'PAIRED (PAIRED) is displayed.
 - If FAILED (FAILED) is displayed, repeat steps 1 to 3.

For DVD home theater

- Connect the home theater, wireless transmitter, and wireless receiver correctly (see 'Connect' on page 3)...
- Insert a pin into the pairing pinhole at the back of the wireless receiver.
 - → The indicator on the wireless receiver blinks for thirty seconds. Complete the remaining steps within thirty seconds.
- Press **≜**.
- Press 1, then press SURR within five seconds.
 - → PAIRED' (PAIRED) is displayed.
 - If **FAILED** (FAILED) is displayed, repeat steps 1 to 3.

4 Product specifications



Note

• Specification and design are subject to change without notice.

Wireless receiver

- Power supply rating: 110-240V; ~50-60 Hz
- Total output power: 250 W (RMS)
- Power consumption: 50 W
- Standby power consumption: ≤ 0.45 W
- Frequency response: 150 Hz ~ 20 kHz
- S/N Ratio: 65 dB (A-Weighted)
- Distortion: 1%
- Dimensions (WxHxD): 126 x 131 x 126 (mm)
- Weight: 1,1 kg

Wireless transmitter

- RF frequency: 5.8 GHz
- Dimensions (WxHxD): 30 x 8 x 53 (mm)
- Weight: 0.009 kg



Philips Consumer Lifestyle

SGP-1208-CE-RWSS5512/00

(Report No. / Numéro du Rapport)

CE2012

(Year in which the CE mark is affixed / Année au cours de laquelle le marquage CE a été apposé)

EC DECLARATION OF CONFORMIT

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.

(Name / Nom de Lientreprise)
TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS (address / adresse)

Declare under our responsibility that the electrical product(s):

(Déclarons sous notre propre responsabilité que le(s) produit(s) électrique(s):)

PHILIPS	RWSS5512/00			
(brand name, nom de la marque)	(Type version or model, référence ou modèle)			
Wireless Rear Audio				
(product description, c	description du produit)			
To which this declaration relates is in confirmit (Auquel cette déclaration se rapporte, est conforme aux normes h (title, number and date of issue of the s				
EN60065:2002, A1:2006, A11:200 EN55022:2006, A1:2007 EN61000-4-2:2009 EN61000-4-3:2006; A1:2008; A2:2 EN62311:2008 IEC62087:2008 IEC62087:2005 EN300 440-1 V1.6.1:2010 EN300 440-2 V1.4.1:2010 EN301 4489-1 V1.8.1:2008 EN301 489-3 V1.4.1:2002				
Following the provisions of: (Conformément aux exigences essentielles et autres dispositions 2006/95/EC (Low Voltage Directive / 2004/108/EC (EMC Directive / Directi 1999/5/EC (R&TTE Directive / Directi 2009/125/EC (ErP Directive / Directiv EC1275/2008 (Regulation for ErP Di	Directive Basse Tension 2006/95/CE) ive EMC 2004/108/CE) ve R&TTE 1999/5/CE)			
Permanent Documents	east in conformity with ISO 9001 or CENELEC à la norme ISO 9001 ou aux Documents Permanents CENELEC)			
Safety : NO66615 EMC : NEI-ETSE-1-1111C158 EMF : NEI-ETSP-2-1111C158 RTTE : NEI-ETSP-1-1111C158				

Drachten, Netherlands, February 21, 2012

A. Speelman, CL Compliance Manager

(place,date / lieu, date)

(Remarques:)

(signature, name and function / signature, nom et fonction)

